



Wireless Siren

User Manual

©2018 Hangzhou Hikvision Digital Technology Co., Ltd. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual  
The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (<http://overseas.hikvision.com/en/>). Please use this user manual under the guidance of professionals.

**HIKVISION** Trademarks Acknowledgement and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

**Legal Disclaimer**  
TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION.

DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.  
REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.  
SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.  
IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

 
- EN 50130-4:2011+A1:2014;
- EN61000-6-3:2007+A1:2014;
- EN61000-3-2:2014;
- EN61000-3-3:2013;
- EN60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013;
- EN300 220-1 V3.1.1:2017;
- EN300 200-2 V3.1.1:2017;
- EN 62479:2010;
- EN301 489-3 V2.1.1:2017



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, the RoHS Directive 2011/65/EU.

EN

Appearance

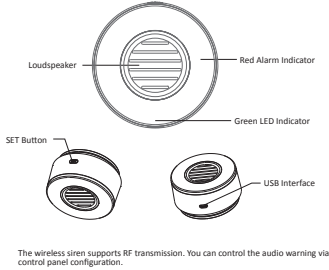

The wireless siren supports RF transmission. You can control the audio warning via control panel configuration.

The equipment is not suitable for use in locations where children are likely to be present.

Quick Operation

Local Registration



Registration  
Make the security control panel enter the registration mode. Trigger the detector and add the detector according to the audio prompt.

Unregistration  
Make the security control panel enter the unregistration mode. Trigger the detector and delete the detector according to the audio prompt.

Note: The distance between the security control panel and the detector should be less than 50 cm.

Formatting

 
Powered the detector off. Hold the reset button after 3s, and power the device on at the same time. After 5s, the green indicator will flash 3 times, which means the formatting is completed.

Registration via APP

- Log in to the APP Store and input "Hik-Connect" to search the mobile client.
- Download and install Hik-Connect to your phone.
- After installing, tap to run the client.
- Power on the security control panel.
- Log in the Hik-Connect and tap the icon "+" at the upper-right corner of the Hik-Connect page to add the security control panel. You can scan the QR code on the device rear panel or on the package box, or input the device serial No. manually to add the device when the device is in the registration mode.
- After adding the security control panel, tap the arming status icon on the right of the security control panel's name to enter the Partition page.
- Tap the "+" icon on the Partition page to add the peripherals.

Installation


Install the device indoor. Base mounting and wall mounting are all supported.




Reinforced concrete can shorten the transmission distance.

Add the device to the control panel before installation.

 - Remove the mounting plate with rotating it anticlockwise.




 - Set the power switch as ON to turn on the device.



FR

 Apparence

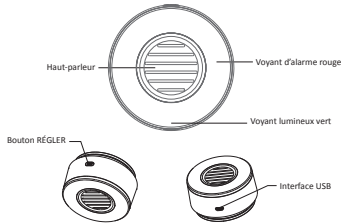

La sirène sans fil prend en charge la transmission RF. Vous pouvez contrôler l'avertisseur sonore via la configuration du panneau de commandes.

L'équipement n'est pas adapté à un usage dans les endroits où des enfants sont susceptibles d'être présents.

Fonctionnement rapide

Inscription locale



Inscription  
Accéder au mode inscription sur le panneau de commandes de sécurité. Déclenchez le détecteur et ajoutez le détecteur en suivant l'invite vocale.

Désinscription  
Accédez au mode désinscription sur le panneau de commandes de sécurité. Déclenchez le détecteur et désassociez le détecteur en suivant l'invite vocale.

Remarque: La distance entre le panneau de commandes de sécurité et le détecteur doit être inférieure à 50 cm.

Formatage

 
Détecteur éteint. Maintenez enfoncé le bouton de test pendant 3 secondes et allumez l'appareil en même temps. Après 5 s, le voyant vert clignotera 3 fois, indiquant que le formatage est terminé.

Inscription via l'application

- Connectez-vous à l'App Store et saisissez « Hik-Connect » pour rechercher le client mobile.
- Téléchargez et installez Hik-Connect sur votre téléphone.
- Après l'installation, appuyez sur pour exécuter le client.
- Allumez le panneau de commandes de sécurité.
- Connectez-vous à Hik-Connect et appuyez sur l'icône « + » dans le coin supérieur droit de la page Hik-Connect pour ajouter le panneau de commandes de sécurité. Vous pouvez scanner le code QR sur la paroi arrière de l'appareil ou sur la boîte de l'appareil, ou saisir manuellement le numéro de série de l'appareil pour ajouter l'appareil lorsque l'appareil est en mode inscription.
- Après avoir ajouté le panneau de commandes de sécurité, appuyez sur l'icône d'état d'armement à droite du nom du panneau de commandes de sécurité pour accéder à la page Partition.
- Appuyez sur l'icône « + » dans la page Partition pour ajouter les périphériques.

Installation


Installez l'appareil à l'intérieur. Le montage sur base et le montage mural sont pris en charge.




Le béton renforcé peut raccourcir la distance de transmission.

Ajoutez l'appareil au panneau de commandes avant l'installation.

 - Retirez la plaque de fixation en la faisant tourner dans le sens contraire des aiguilles d'une montre.




 - Réglez le contact d'alimentation sur ACTIVÉ pour allumer l'appareil.



PT

 Apresentação

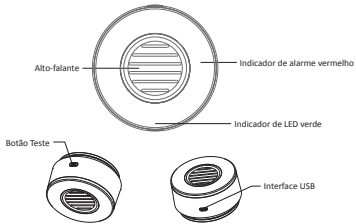

A sirene sem fio suporta transmissão de RF. Você pode controlar o aviso de áudio pela configuração do painel de controle.

O equipamento não é adequado para uso em locais onde possa haver crianças.

Operação rápida

Registro local.



Registro  
Coloque o painel de controle de segurança no modo de registro. Acione o detector e adicione-o de acordo com o comando de áudio.

Cancelar o registro  
Coloque o painel de controle de segurança no modo de cancelamento de registro. Acione o detector ou exclua-o do painel de acordo com o comando de áudio.

Observação: A distância entre o painel de controle de segurança e o detector deve ser menor do que 50 cm.

Formatação

 
Desligue o detector. Pressione o botão Teste por 3 segundos e simultaneamente ligue o dispositivo. Depois de 5 segundos o indicador verde piscará 3 vezes, o que significará que a formatação foi concluída.

Registro pelo app

- Entre na loja de aplicativos e digite "Hik-Connect" para pesquisar o app para celular.
- Baix e instale o Hik-Connect no seu telefone.
- Após a instalação, toque em para executar o app.
- Ligue o painel de controle de segurança.
- Faça o login no Hik-Connect e toque no ícone "+" no canto superior direito da página do Hik-Connect para adicionar o painel de controle de segurança. Você pode escanear o código QR no painel traseiro do dispositivo ou na caixa de embalagem, ou inserir o número de série do dispositivo manualmente para adicioná-lo quando ele estiver no modo de registro.
- Depois de adicionar o painel de controle de segurança, toque no ícone de status de alarme à direita do nome do painel para entrar na página Partição.
- Toque no ícone "+" na página Partição para adicionar os periféricos.

Instalação


Instale o dispositivo internamente. Ele suporta montagem na parede ou no teto.



O concreto armado pode encurtar a distância de transmissão.

Adicione o dispositivo ao painel de controle antes da instalação.

 - Remova a placa de montagem girando-a no sentido anti-horário.



- Coloque a chave de energia em LIGAR para ligar o dispositivo.

